

Marantec 868MHz and 433MHz Handset Programming Procedure

Covering these models only - Digital 302, 304, 313 and 321

(Not compatible with earlier 433MHz handsets)

Programming an additional handset

Learn Existing Coding - This function transmits the coding of an existing hand transmitter of the same series to an additional hand transmitter.

Advice – Both sides of the double ended three pronged coding plug can be used either way round.

Caution !!! – During programming an actuation of the hand transmitter may start the door moving.

Step 1 – Connect both hand transmitters by means of the double ended three pronged coding plug supplied.

Step 2 - Actuate the existing hand transmitter and hold the button down. The LED on the transmitter should be on.

Step 3 - Actuate the desired button of the new hand transmitter while holding the button of the existing transmitter down.

After 1 – 2 seconds the LED on the new transmitter will be glowing permanently. Programming has now been achieved. The new hand transmitter has now taken over the coding of the existing hand transmitter.

Now remove the coding plug.

Repeat the process to programme any additional buttons that are used.

Changing the code of existing hand transmitters

Changing Coding – It is possible to change the coding of existing hand transmitters for security reasons if one has been lost or stolen. To do this, you have to insert the coding plug into the hand transmitter that has to be reprogrammed as follows.

Procedure

- Insert the coding plug into the hand transmitter
- Short circuit one of the outer pins of the three pronged coding plug with the centre prong of the coding plug using a screwdriver or other metal tool.
- Actuate the desired button on the hand transmitter and the integrated random program generates a new code. The LED will be flashing quickly at this stage.
- As soon as the LED on the hand transmitter has stopped flashing and is permanently on, release the button on the hand transmitter and remove the coding plug.

Advice – After a new coding of the hand transmitter the garage door operator has to be reprogrammed to the new code, because the old code has been lost irrevocably.

Advice – For multi-channel hand transmitters this procedure, (learn coding/change coding), has to be carried out for every single button.

If you encounter difficulties with either of these procedures please call or email us for assistance or contact Marantec UK on - 01709 890810.