

SETTING REMOTE CONTROL

13.1 SELECT YOUR CODE

- Slide back the front cover on the handset to expose the code switches (see Fig 31).
- Select your personal code by setting the switches up or down using a ball pen. NB Avoid setting all up or all down or alternate up/down.
- Replace the cover on the handset.
- If you have more than one handset set them all to the same code.

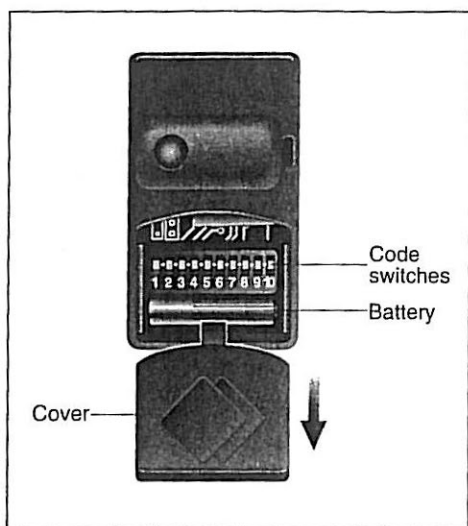


Fig 31

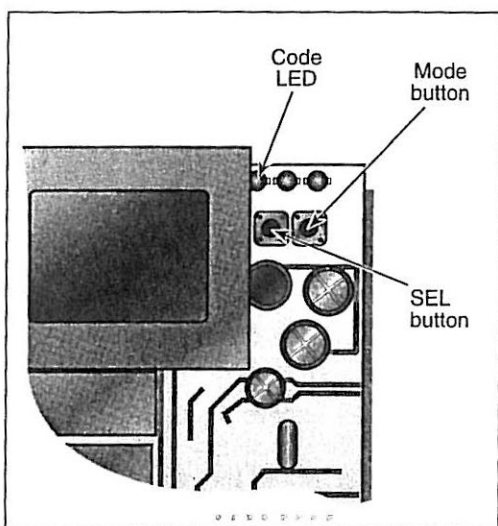


Fig 32

13.2 PROGRAMME THE CODE

- Remove the cover from the control unit, by sliding carefully upwards, to expose the setting buttons (see Fig 32). See also main electrical circuit Fig 29).

- Using the flat end of a ball pen press the SEL button, the CODE L.E.D. will start to flash.

Press the button on the handset, the CODE L.E.D. will now stay ON. This indicates that the code has been accepted.

NOTE: If you have more than one handset you only have to programme the first one, the others should be set to the same code.

13.3 TO DELETE THE CODE

- Remove the control box cover.
- Press SEL button, the CODE L.E.D. will start to flash.
- Press MODE button, the CODE L.E.D. will go out. This indicates code has been deleted.

13.4 TWO DOOR INSTALLATIONS

- For instances where two doors are installed a TWO CHANNEL handset can be used (optional accessory).
- Select code as before on the handset.
- Programme the LH door (when viewed from outside) using the LH button on the handset and the RH door using the RH button on the handset.