

## Model 3401E Single Function Remote Control Transmitter

## Model 3402E 2-Channel Remote Control Transmitter

**CAUTION: ACTIVATE THE OPENER ONLY WHEN THE DOOR IS IN FULL VIEW, FREE OF OBSTRUCTION AND PROPERLY ADJUSTED. NO ONE SHOULD ENTER OR LEAVE THE GARAGE WHILE DOOR IS IN MOTION. DO NOT ALLOW CHILDREN TO OPERATE THE TRANSMITTER(S) OR THE WALL PUSH BUTTONS. DO NOT ALLOW CHILDREN TO PLAY NEAR THE DOOR.**

original remote control is preset at the factory to the same coded signal as the receiver. The code switches in any / remotes must be set to matching positions. The 2-Channel Remote has two push buttons (Channel 1 and Channel 2) each activated by its own code switch block. One set of switches can be positioned to match the code in a single function remote control for a garage door opener. The other channel can be set to operate a second garage door opener.

E: The channel 2 push button is adjacent to the battery test light.

**NOTE: If you press both buttons at the same time, the remote control transmitter will not operate.**

### MATCHING REMOTE CONTROL CODES

Code switches in ALL transmitters used to operate a receiver must be set to match.

Model 3402E, decide which push button will be used to operate your garage door opener (Channel 1 or Channel 2). If you intend to keep your original code, proceed as follows:


1. The visor clips off, remove the screw in both the original and the new remote. Carefully turn the cases over (push button sides up). Remove case tops.

**CAUTION: DO NOT MOVE CIRCUIT BOARD COMPONENTS.**


Place remote circuit boards side by side. Set the code switches to the same positions as in the original remote. Use a screwdriver or pen to slide the switches.

**NOTE: The remaining set of code switches in the 2-channel remote can be used to operate a second garage door opener.**

2-CHANNEL REMOTE CONTROL TRANSMITTER

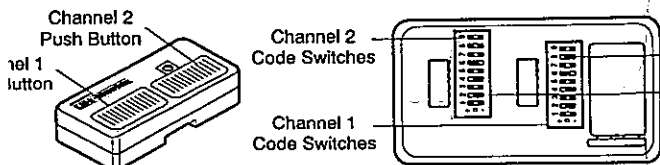

SINGLE-FUNCTION REMOTE CONTROL TRANSMITTER

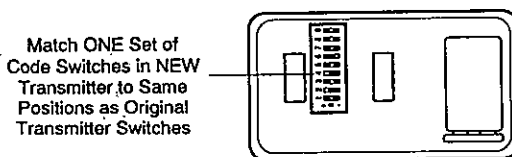

### CHANGING THE CODE IN RECEIVER AND TRANSMITTER(S)



In all remote control cases as described above. Change the position of one or more code switch in the original remote (1), (—) or (0). Set all other remotes to match. Re-assemble cases.

2. Press the "Smart" button on receiver as shown. Press the "Smart" button. The adjacent indicator light will turn ON. **CAUTION: Door will begin to move immediately if a neighbor or family member is operating a remote.**

3. STAND AWAY FROM THE DOOR and press the remote push button. The indicator light will turn OFF and the door will move. The receiver and remote control codes now match.

**NOTE: If remote push button is not pressed within 30 seconds, indicator light will turn OFF. Press the "Smart" button again and repeat procedure.**

The remote control may be secured to a car sun visor with provided. A 9 Volt battery should produce power for at least one year. If transmission range lessens, check battery light. If the light is dim or doesn't turn on, replace the battery by removing remote cover screw. Discard old battery; plug connector onto new battery. Replace case top.

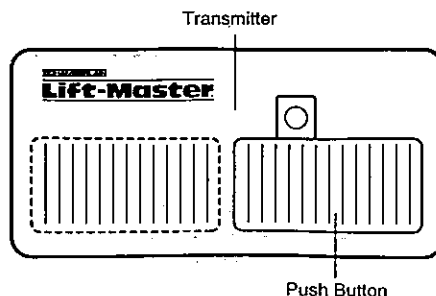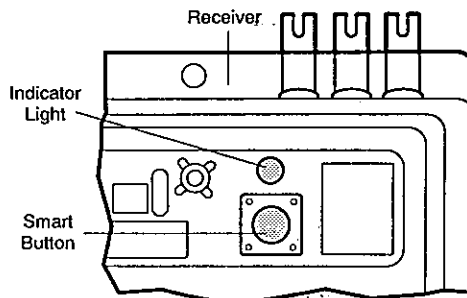

#### Replacement Parts

Use, Cover and Screw Only:

Single Function Remote

41A4094

2-Channel Remote Control

41A4095

Sensor Clip

29C121-2