

Seip 40Mhz Midi Handset Programming Procedure

1. Open the battery cover on both the old and new handsets.
2. In each handset you will see 10 dipswitches labelled 1 to 10.
3. In the new handset set the dipswitches to match the switches 1 to 10 in your existing (old) handset.
4. Replace the covers.
5. One of the four buttons will operate your garage door opener.
6. If you have lost your handset or it has been stolen, then open the motor cover of your operator where you will find a bank of dipswitches on a printed circuit board. For security reasons (to prevent your old handset from being used to access your garage) change the settings of these switches to a position of your choice. Then set the switches on the inside of the new/replacement handset to the same position as that on the circuit board.

If your printed circuit board is of a type that has no switches then follow this procedure.

1. Press the decoder button on the printed circuit board and then release it.
2. You now have 10 seconds to press the button on your new handset that you wish to use to control your Operator.
3. Press the button you have just programmed and the garage should open/close as required.

If your handset has been lost or stolen. Press the decoder button and keep it pressed until the LED light on the decoder illuminates. Now release the button. Continue as from step 1 to reprogramme.