

SETTING YOUR TRANSMITTER CODE

This transmitter is compatible with model TX003.

Before you can use your transmitter you must first set the security code so that it is the same as your existing transmitters.

1. Remove the screw located on the back of your existing transmitter and carefully lift off the front, put the transmitter to one side, now remove the screw and front of the new transmitter.
2. Locate the row of 10 switches on your new transmitter and adjust their position using the tip of a ballpoint pen so they match your existing transmitter.
3. Check that you have set the switches correctly, fit the front and replace the screw. Your transmitter is now ready to use.



(Code switch showing factory settings)