


## CODING YOUR HAND TRANSMITTER/RECEIVER

The radio remote control signal from the hand transmitter is protected with a security code which has been randomly coded prior to despatch. If you wish to change this code to one of your choice proceed as follows:-

- 1** Ensure mains power is switched OFF and remove fixing screws from control box cover. Remove cover and locate receiver box.
- 2** Remove rubber cover from receiver box.
- 3** Open back of hand transmitter.
- 4** Both transmitter and receiver use ten miniature slide switches to program the code. These switches should be set at random to give a "personalised" code.
- 5** Set switches at random on receiver box unit.
- 6** Set hand transmitter OPPOSITE to receiver unit, (i.e. switch 1 set UP on receiver unit should be set DOWN on hand transmitter) See Figure 1.
- 7** Reassemble handset and receiver unit. Refit control box cover and turn mains power back on.


Remove bung to  
expose code  
switches

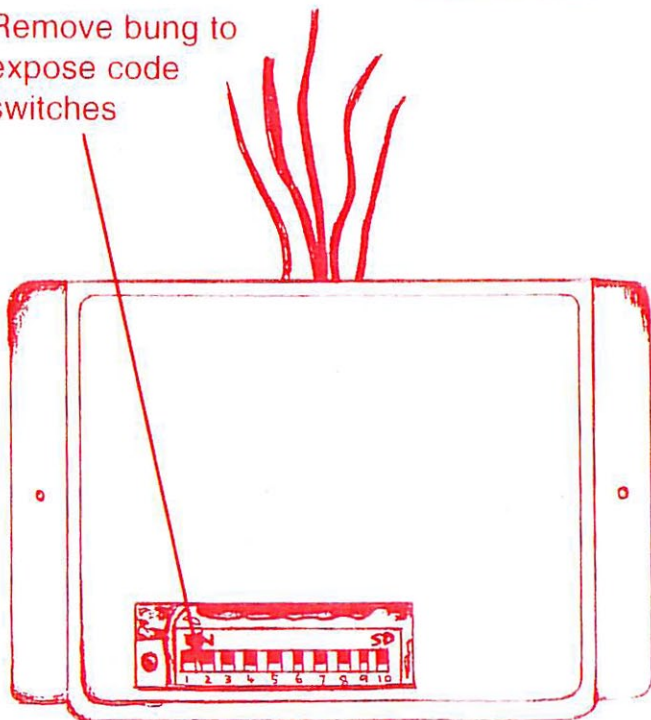

N.B UP is ON

**1 RECEIVER UNIT**

Fixing screw

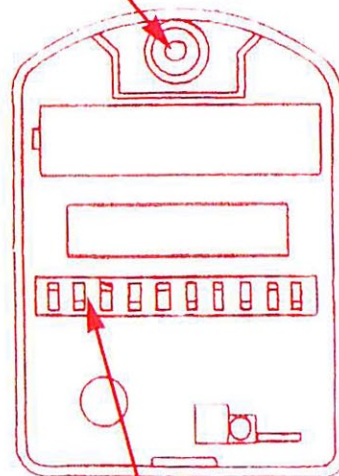

Code switches

N.B DOWN is ON

**HAND TRANSMITTER**