

INSTRUCTION TO REPLACE LOCK BARREL

PARTS LIST

1. Lock Barrel and 2 Keys
2. Circlip
3. Fitting Instruction Sheet

TOOLS REQUIRED

Phillips Screwdriver
Flat Head Screwdriver
Circlip Pliers

The complete Lock Body has to be removed from the garage door before the Lock Barrel can be replaced.

PROCEDURE

To Remove

1. Note orientation of components, unscrew and slide off the internal latch lever and cam.
2. Unscrew and remove the two pan head screws securing Lock Body to door.
3. Slide Lock Body out through front of door.


NBI Save parts for refitting:

4. On the inside of the Lock Body locate the Circlip on the end of Lock Barrel remove using pliers and discard
5. Remove Cam and retain
6. From the outside of the Lock Body withdraw the Lock Barrel from Fascia and discard
7. Ensure mechanism is in Locked (Upper) position
8. Insert the new Lock Barrel into the Fascia (See note below)
9. From the inside of the Lock Body place Cam over the end of Lock Barrel with projection pointing up and Circlip Groove visible. Fit Circlip onto end of Lock Barrel using Pliers, ensuring it locates fully in the groove

10. Check operation

Re-Fitting

11. Refit Lock Body to door using all saved parts
12. Check Lock operation and Latch settings

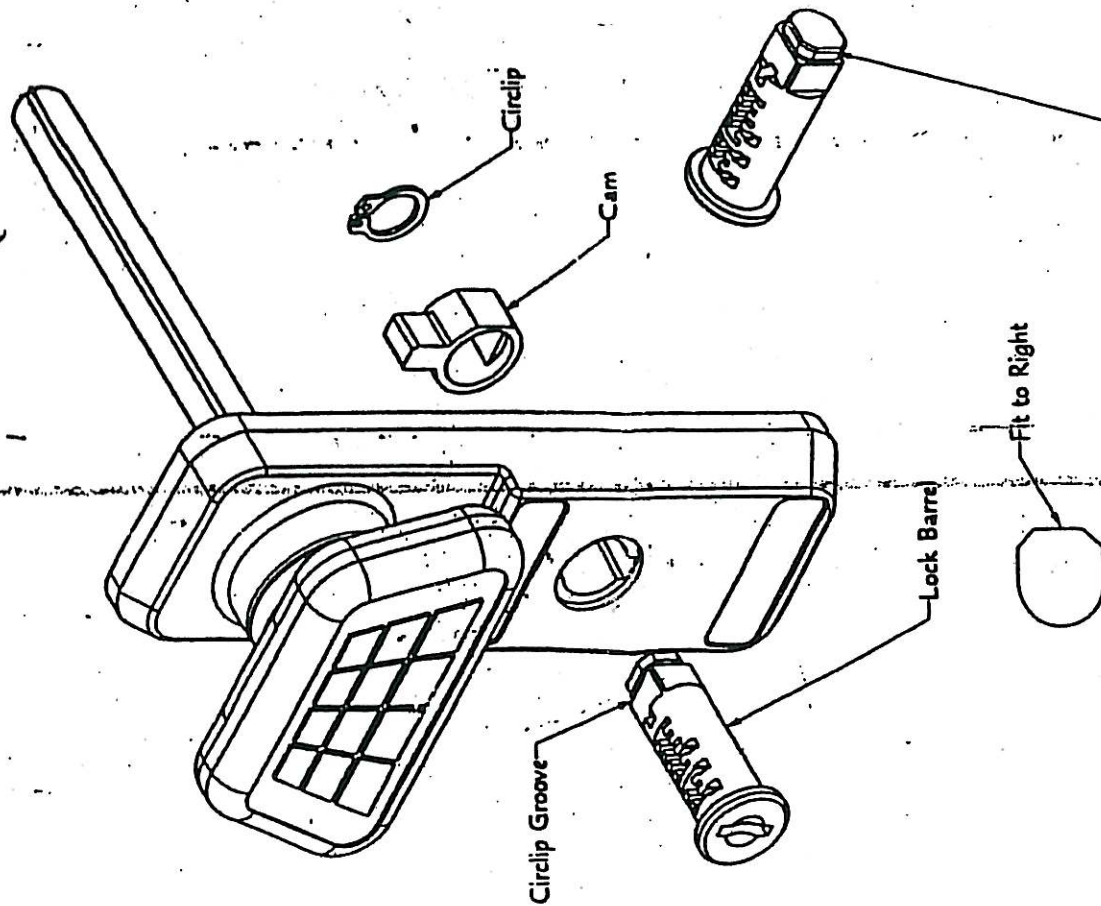

NOTE:
When inserting barrel to the Fascia ensure the flat side of the 'D' is to the right of the Handle