

## **AZSP 1011**



## Fitting Instructions for Slideaway Wheel Spindle Assembly

## **CONTENTS**

2 offSlideaway Wheel Spindle AssembliesDPIA 07072 offSplit Pins 1/8" X 1"DPIN 02711 offInstruction SheetDPIN 55112 offWashers 3/8"DPIN 0205

## INSTRUCTIONS: (TO BE CARRIED OUT FROM INSIDE GARAGE WITH DOOR CLOSED)

- 1. Remove Rubber Stop Assembly from end of Track (Fig. A)
- Remove Screws from Wheel Bracket Assembly and slide Wheel Bracket from Track (Fig. B). Retain screws.
- Remove Split Pin from Wheel Spindle and remove Wheel Spindle from Bracket.
- 4. Insert New Wheel Spindle into Bracket and place washer on Shaft, then put Split Pin through hole in Wheel Spindle.
- 5. Insert reassembled Wheel Spindle in track and slide back to door.
- 6. Re-attach Bracket to the Door with Screws.
- 7. Replace Rubber Stop Assembly.

Repeat for other side of the Door.

