

Programming sequence For Marantec operators

Comfort 150 – 160 – 220 – 250 – 250B – 252 – 257 – 820 - 830 Non-EOS. Up to year 2000

Press and hold P for 3 seconds (+ on – off)	All lights on number 1 flashes (photo cell setting)
Press P once	All lights on number 2 flashes (open limit)
Press and hold + until door is fully open	
Press P once	All lights on number 4 flashes (close limit)
Press and hold – until door is fully closed	
Press P once	All lights on number 2 and 6 flashing (power setting open direction)
Press + to increase power – to decrease power	More lights on = more power. Less lights on = less power
Press P once	All lights on number 4 and 6 flashing (power setting close direction)
Press + to increase power – to decrease power	More lights on = more power. Less lights on = less power
Press P once	All lights on number 7 flashing
Press Handset button once	All lights on number 7 flashes quickly
Press P once to end programming	Light 8 on

Comfort 220 – 250 – 252 – Non-EOS. Up to year 2003

Press and hold P for 3 seconds	All lights on number 2 flashing (open limit)
Press and hold + until door is fully open	
Press P once	All lights on number 4 flashing (close limit)
Press and hold – until door is fully closed	
Press P once	All lights on number 7 flashing (programming handset)
Press Handset once	Light 7 flashes quickly
Press P once	Light 8 flashing (factory reset)
Press P once	Light 8 and 4 on (programming ended)

Comfort 220 – 250 – 252 and .2 from 2007 to now, EOS Operators

Press P for 3 seconds	Lights 8, 1 and 2 on (open limit)
Press and hold + until door is fully open	Lights 8, 1 and 2 flashing
Press P once	Lights 4, 5 and 6 on (close limit)
Press and hold – until door is fully closed	Lights 4, 5 and 6 flashing
Press P once	Lights 6 and 8 on 7 flashing (handset programming)
Press Handset button once	Lights 7 flashes quickly
Press P once	Light 8 and 4 on (programming ended)