

# HOW TO CODE IN YOUR APERTO HANDSET



Remove the white cover (picture A)



A


Cover removed (picture B)



B

Take a small screwdriver – press then release the black button (picture C)

A red light starts to shine (picture C star)

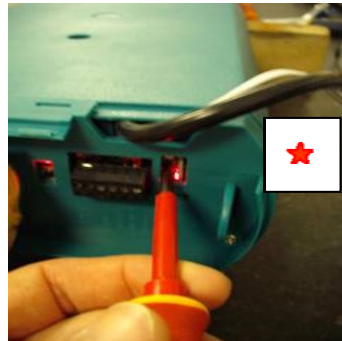

C

Take the Aperto handset press and hold the first button down (picture D) red light starts to flash

Hold down the button on the handset until the red light stops flashing and goes out.

***The handset is programmed and ready to use***



D