


How to programme your new hand transmitter to your Duo:




1. Find the control box (picture A).



2. Remove the white cover with a small screwdriver (picture B)

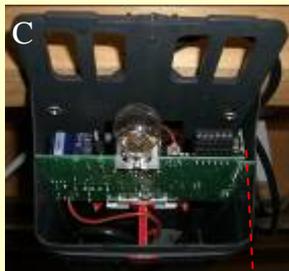

3. Cover removed (picture C)

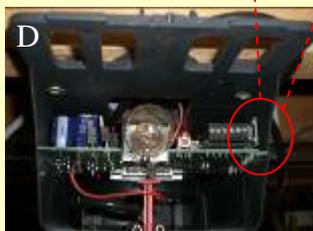

4. Take a small screwdriver press the button once and release

5. A red light starts to shine (picture D★)



6. Take the handset. Hold the first button down. The red light in picture D starts to flash. (picture E★)

7. Hold down the button on the handset until the red light stops flashing and goes out (picture E)

The handset is programmed and ready for use! Other buttons on your hand transmitter can also be programmed by repeating this procedure.

