


Roller Spindle Fitting Instructions For Henderson Premiere

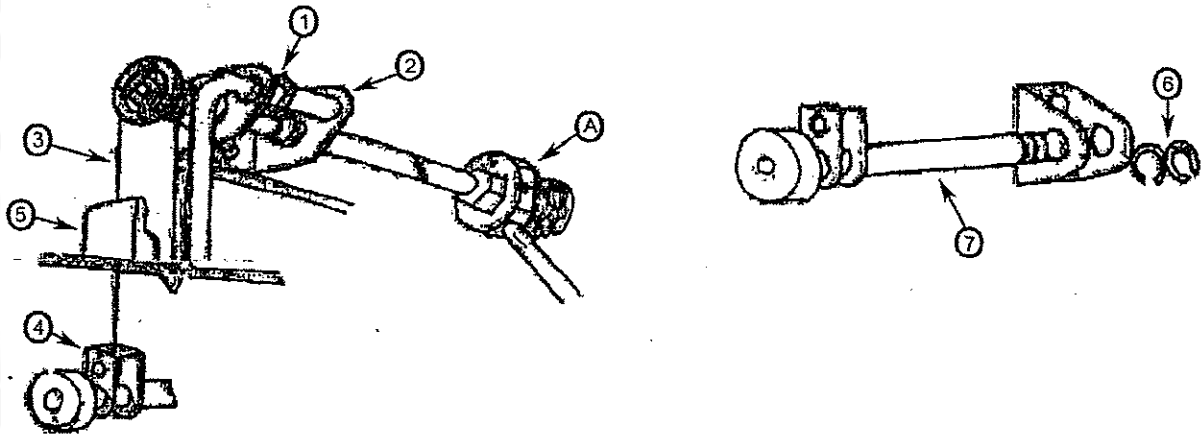

1. Using toggle bar in plug **A**, rotate shaft to ease spring tension and insert the crook pin **(1)** into the left hand head bracket **(2)** and remove/unclip the cable **(3)** from the roller spindle clips **(4)**
2. Secure the door in position and remove jamb channels **(5)**
3. Remove both circlips **(6)** from each roller spindle **(7)** and withdraw roller spindle
4. Replace with roller spindles **(7)** and circlips **(6)**
5. Refit jamb channels in position and clip cables into new roller spindle clips **(4)**. Ease spring tension using toggle bar and remove crook pin **(1)**
6. Carefully allow spring to take up slack, ensuring that the cables are in the outer groove and run down behind the cone and that the roller spindle clips **(4)** are in position as shown

SAFETY NOTE

Safety glasses and gloves should be worn at all times. If in doubt, this work should be carried out by an experienced installer. You may require assistance.

All work is undertaken at your own risk.

SKU: HPS4050